



INSTALLATION INSTRUCTIONS

CARBAHN.COM/INSTRUCTIONS

CARBAHN ECCENTRIC BOLT BLOCKER M2 M3 M4

**CARBAHN PART #:
CBB12-24-8879**



US Based Support
866-558-4314
Sales@CarBahn.com
CarBahn.com

CBB12-24-8879 – CarBahn Eccentric bolt blocker

These instructions assume that the person installing these parts is a BMW CERTIFIED MECHANIC and are NOT step by step instructions on how to disassemble and reassemble the car!

Installation of CBG8X-3018 Eccentric Lock Plate Kit requires installaion of CarBahn Adjustable Toe Link Kit (CBF82-3123)

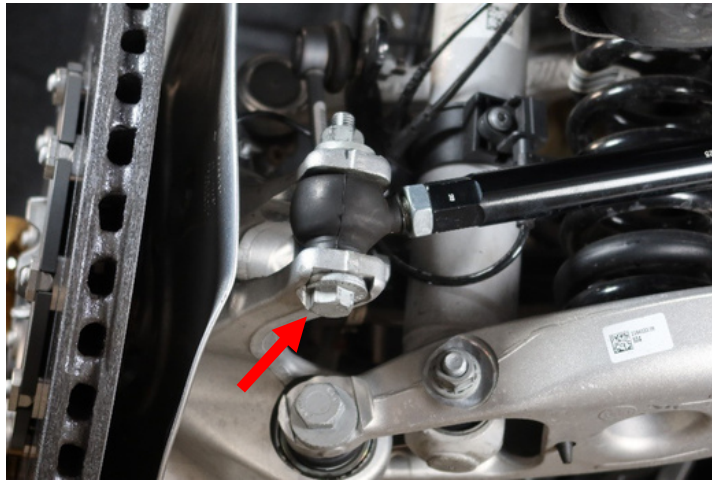


Figure 1

1. First locate the rear toe link bolt at the knuckle side of the car and remove. (Figure 1)
2. With the bolt removed you can discard the cam washer that was on the nut side of the bolt. (Figure 2)



Figure 2

3. Reinstall the bolt using two of the lock out plates (one on each side of the bolt), making sure that the plates are fully seated in the machined channel of the knuckle and torque to BMW spec. (Figure 3-4)

CBB12-24-8879 – CarBahn Eccentric bolt blocker



Figure 3 Figure 4

4. Complete this process on both sides of the car and align the vehicle using our adjustable toe link kit to set toe when installation is completed. Test drive and check the torque of bolts after completing test drive.