



INSTALLATION INSTRUCTIONS

[CARBAHN.COM/INSTRUCTIONS](https://carbahn.com/instructions)

BMW M2/M3/M4 SUSPENSION LINKS

**CARBAHN PART #:
CBF82-3123**



US Based Support
866-558-4314
Sales@CarBahn.com
CarBahn.com

Info

Kit ID: CBF82-3123

Instructions ID: CBINS-3047

Version: 1.0.0


Date Published: October 6th, 2020

Warnings

- ⚠ If not used and installed properly this component can significantly affect the performance and drivability of the vehicle.
- ⚠ Use secure jack stands, do not work on vehicles supported by a jack only.
- ⚠ Re-aligning the car after installation is required to fully utilize the kit and not affect drivability, only use the BMW recommended alignment.
- ⚠ Please only use recommended BMW procedure for working on the car and installing these parts.



Tall Spacer Side

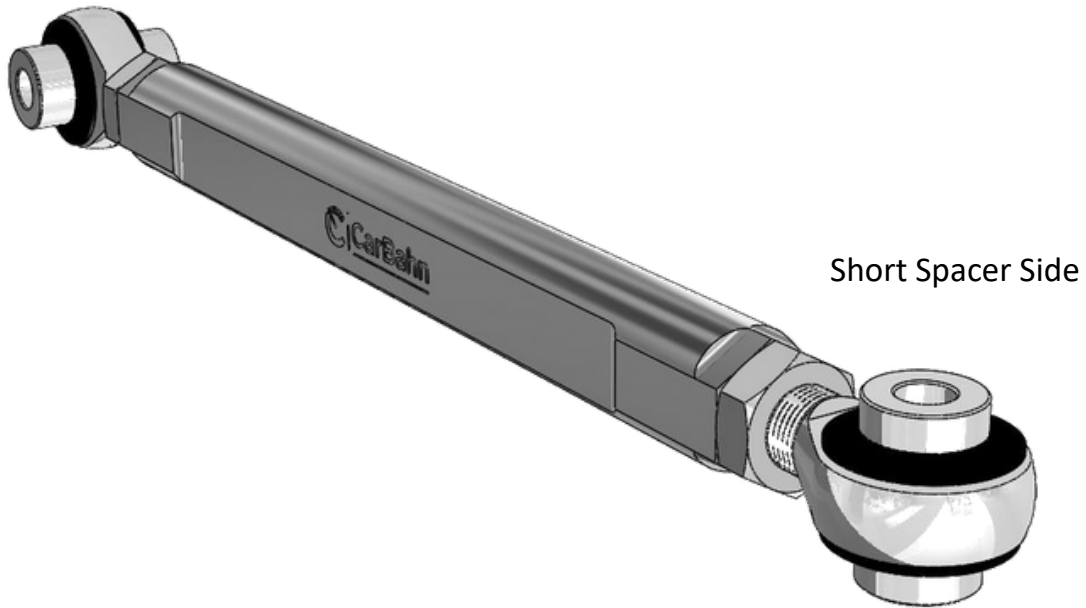

Installation

1. Remove the stock suspension links from the vehicle as per the recommended BMW TIS procedure, the suspension links are listed on BMW TIS as - Wishbone with rubber bushing, lower (33 32 2284777).
2. Set aside the washers, nuts and bolts for the stock toe links as they will be used again. Be sure to use re-use factory hardware in their original locations.
3. Take note of the sides that will require the Tall Spacers and Short Spacers so as to align them correctly while installation.
4. Proceed to install the CarBahn Autoworks Suspension Links. Use the BMW bolts, washers, and nuts to secure the assembly to the chassis.
5. CarBahn Autoworks Suspension Links are pre-adjusted to stock length.
6. An alignment must be performed after installing the Suspension Link kit.