



# INSTALLATION INSTRUCTIONS

[CARBAHN.COM/INSTRUCTIONS](https://carbahn.com/instructions)

**CARBAHN F9X M5 & M8 ADJUSTABLE REAR TOE LINK KIT**

**CARBAHN PART #:  
CBF90-3105**



US Based Support  
866-558-4314  
[Sales@CarBahn.com](mailto:Sales@CarBahn.com)  
[CarBahn.com](https://CarBahn.com)

## Info

**Kit ID:** CBF90-3105

**Instructions ID:** CBINS-3034

**Version:** 1.1.0


**Date Published:** March 2nd, 2020

## Warnings

- ⚠ If not used and installed properly this component can significantly affect the performance and drivability of the vehicle.
- ⚠ Use secure jack stands, do not work on vehicles supported by a jack only.
- ⚠ Re-aligning the car after installation is required to fully utilize the kit and not affect drivability, only use the BMW recommended alignment.
- ⚠ Please only use recommended BMW procedure for working on the car and installing these parts.



Inboard Side

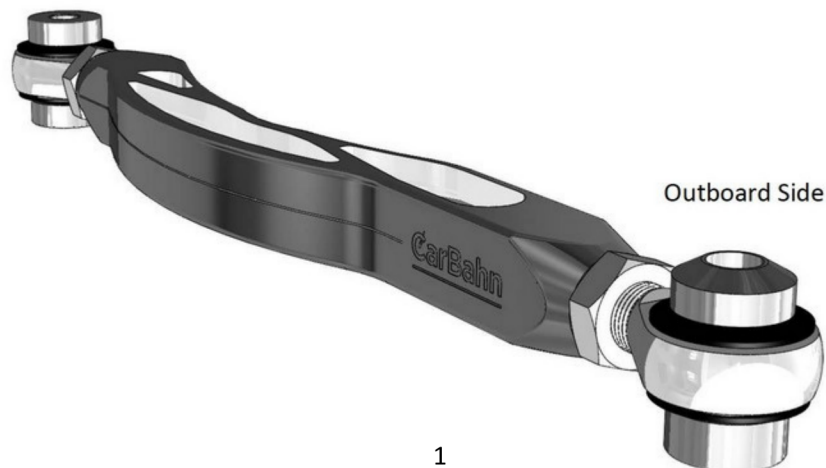

## Installation

1. Remove the stock rear toe links from the vehicle as per BMW TIS procedure. 2. Set aside the washers, nuts and bolts for the stock toe links as they will be

used again. Be sure to use re-use factory hardware in their original locations.

3. Align the inboard side of the CarBahn Autoworks toe link with the chassis side (inboard) mount.

4. Use the inboard bolts, washers and nuts to secure the assembly to the chassis.

5. Align the outboard side of the CarBahn Autoworks toe link with the mounting location on the upright (outboard).

6. Use the outboard bolts, washers and nuts to secure the assembly to the chassis.

7. CarBahn toe links are pre-adjusted to correct length, no additional adjustment should be necessary.

8. Perform an alignment after installing the toe link kit.